




KCNC Ti Pro Lite Seatpost Instructions.

Thank you purchasing a KCNC Ti Pro Lite seatpost. The following instructions should be read thoroughly before installation. Improper installation of the seatpost may result in unexpected failure causing you to lose control of your bicycle possibly causing serious injury or death. We strongly recommend having your components installed using the correct tools by a qualified bicycle technician. KCNC accepts no responsibility or liability arising due to faulty installation.

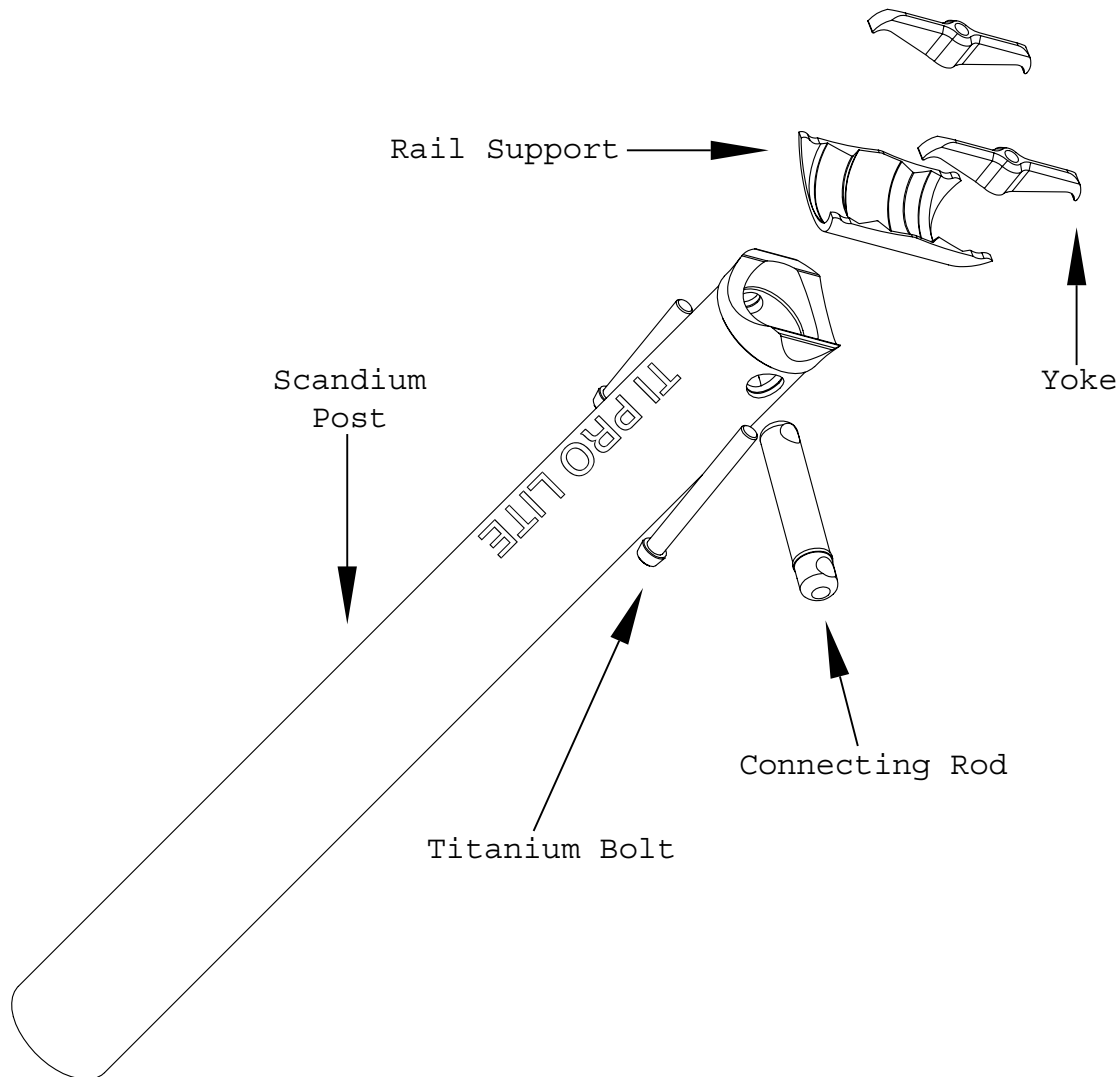

- 1) Loosen the Titanium bolts.
- 2) Work the yokes onto the seat rails from the rear of the saddle and gently slide into position.
- 3) Tighten the bolts using a torque wrench with a 4mm Allen key/ hexagonal head, to 4 Nm until the rails are held firmly.
- 4) Grease the post and mount on the bicycle.
- 5) Adjust the angle of the seat by loosening one bolt anti-clockwise and the other clockwise in half turns.
- 6) Confirm that the bolts are re-tightened to 4 Nm when the desired angle is reached.

Ideally a saddle should be positioned so that it is not angled so far forward as to put undue pressure on the hands, wrists and shoulders, yet not too far back so as to feel one is sliding backwards. For XC riding the saddle should be positioned so as not to hit you, if you land incorrectly.